


touchCUE-10

CS0559




Description

Front View

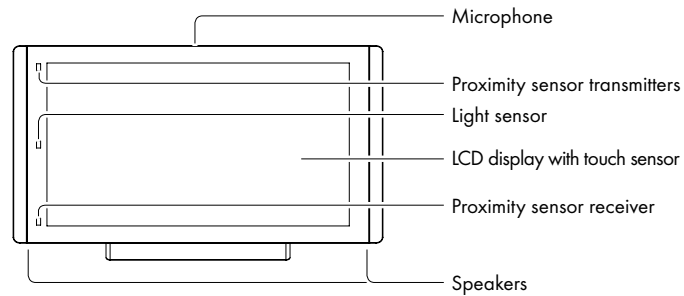

Side View

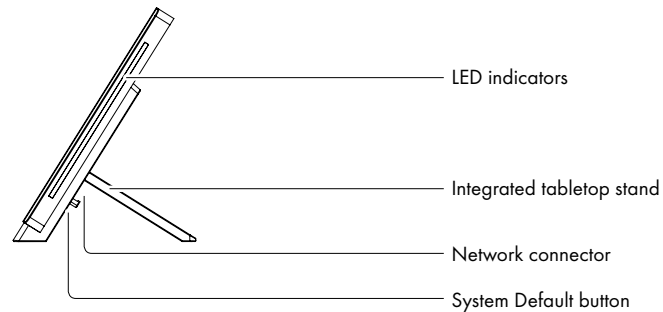


Box Contents


Touch panel touchCUE-10
Power supply with PoE injector incl. power cable
Cleaning tissue
Flat Ethernet cable
Quick Start
Declaration of Conformity & Warranty conditions

Connection

Ethernet without PoE Infrastructure

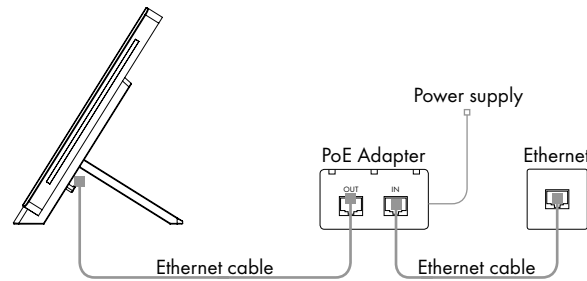

Ethernet with PoE Infrastructure

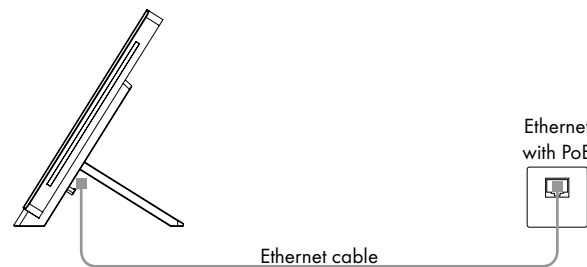

System Default Setup


When System Default button is pressed longer than 5 sec., the system default function is performed and setup is as follows

- IP address: from DHCP (192.168.1.128 without DHCP)
- IP Mask: from DHCP (255.255.255.0 without DHCP)
- Password: Empty (no input required)

Installation

Installation steps are as follows

1. Install the network cable as described on the following picture and connect the network connector.

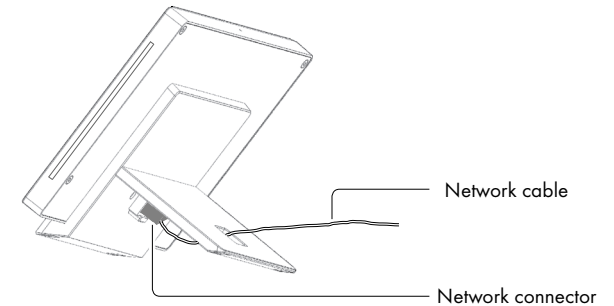

2. Place the touch panel on a table.

User Manual

Complete user manual can be downloaded here:
http://www.cuesystem.com/user_manuals.aspx